

Packaging Includes



• 2 x Valve Cap




• 2 x Presta Valve Core

• 2 x Valve Nut


• 2 x O-Ring

• 2 x Rubber


• 2 x Valve Stem

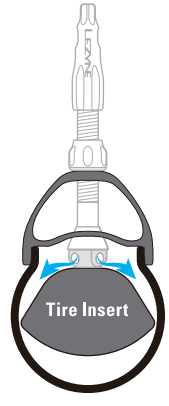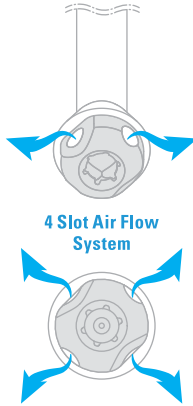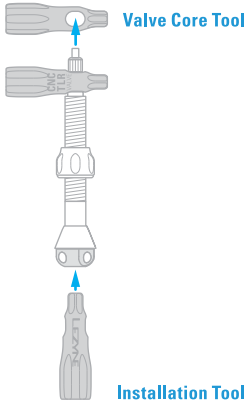


Wheel Rim Height Compatible Range

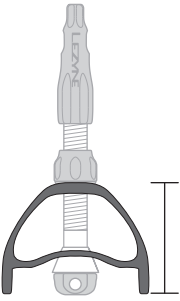

Valve Size 44mm
Rim Height \leq 30mm

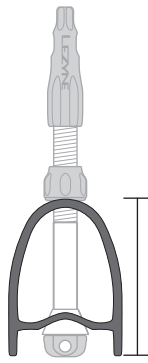

Valve Size 60mm
Rim Height 30-45mm

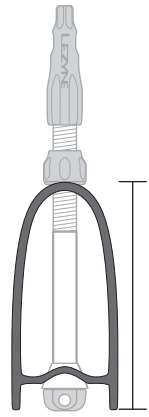


Valve Size 80mm
Rim Height 50-65mm

Installation Instructions


A CNC TLR VALVE PRO

- Remove valve cap, valve nut and O-ring.
- Insert valve through valve hole in rim, ensuring correct alignment.
- Install O-ring onto valve stem.
- Secure valve base using T25 valve cap and thread valve nut onto valve stem.
- Hand tighten valve nut until rubber cone seals against inner rim, avoid overtightening.
- To tighten or loosen valve core, use integrated valve core tool.
- Install valve cap.


1 Install valve on rim

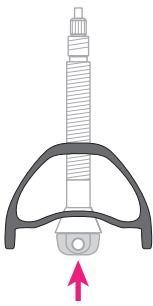

2 Hold and twist valve nut

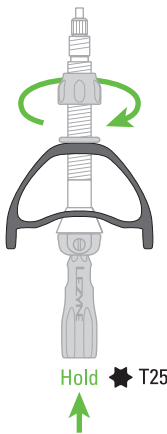

3 Install valve cap

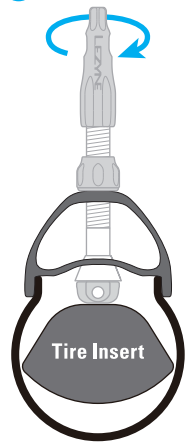

B Integrated Valve Core Tool

